

### 3-1. Using the touch screen

## Touch screen (without navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc.

Press  to display the “Information” screen.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.



Button/switch	Page
"CLIMATE"	P. 262, 270
"AUDIO"	P. 291
"INFO" (Displaying the "Information" screen)	P. 254
"DISP" (Adjusting the display)	P. 257
"Trip information"	P. 34
"Telephone"	P. 392
"LEXUS Park Assist"	P. 215
"Screen Setting"	P. 259
"Beep Off"	P. 257
"Adjust Clock"	P. 449

#### The initial screen



If the “POWER” switch is turned to ACCESSORY or ON mode, the initial screen will be displayed for a few seconds as the system starts up.

#### n To avoid damaging the touch screen

- 1 Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- 1 Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

#### n When using the touch screen

- 1 If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- 1 The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the “Display” screen or remove your sunglasses.

### 3-1. Using the touch screen

## Setting the touch screen

You can change the touch screen to your desired settings.

#### Turning off the beep sound

The beep that sounds when a touch screen switch is touched can be turned off.

**STEP 1** Press .



Touch .


#### Adjusting the display

**STEP 1** Press .


**STEP 2** Adjust the display as desired using  /  and  / .

If you do not touch the screen for 20 seconds, the system will return to the previous screen.

► With CD mode

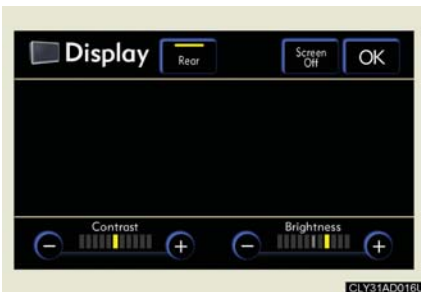


► With DVD mode

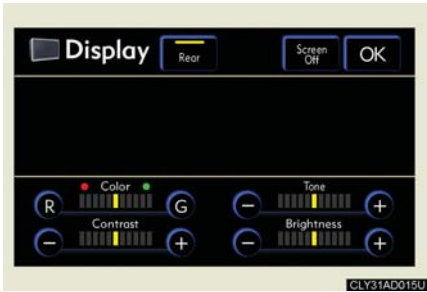


		
"Color"	Red	Green
		
"Tone"	Lighter	Darker
"Contrast"	Weaker	Stronger
"Brightness"	Darker	Brighter


■ "Day Mode"

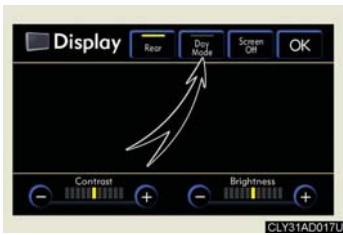


When the headlights are turned on, the screen dims. However, the screen can be switched to "Day Mode".

The screen will stay in "Day Mode" when the headlights are turned on until  is touched again.

■ To turn off the picture display

If  is touched, the screen display is turned off, and guidance is by voice only.


## n Opening or closing the rear display (if equipped)

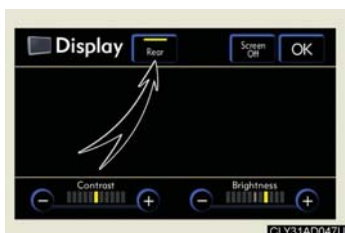

Touching **Rear** opens or closes the rear display.

## Screen settings

The following screen settings can be changed:

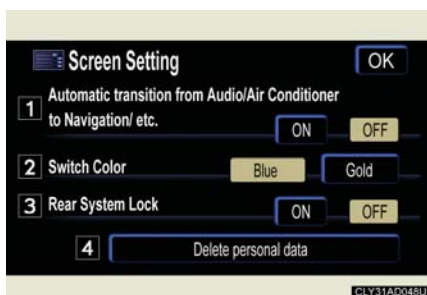

### 1 Automatic transition

20 seconds after audio system use, the system will return the display to the previous screen.

### 2 Switch color

You can select the switch color.

### 3 Rear system lock (if equipped)

The operation lock on the rear seat entertainment system can be turned on or off.


### 4 Personal data deletion

The following personal data is deleted:

- User selection settings
- Phone book data
- Dialed numbers and incoming calls
- Speed dial
- Bluetooth® phone data
- Security code

#### n Setting automatic transition

**STEP 1** Press  .


**STEP 2** Touch  on the "Information" screen.



**STEP 3** Touch  or  on the "Screen Setting" screen.

**STEP 4** Touch  .

#### n Setting the switch color

**STEP 1** Press  .


**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  or  on the "Screen Setting" screen.

**STEP 4** Touch  .

#### n Setting the rear system lock

**STEP 1** Press  .


**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  or  on the "Screen Setting" screen.


**STEP 4** Touch  .

## n To delete personal data

**STEP 1** Press  .

**STEP 2** Touch  on the "Information" screen.

**STEP 3** Touch  on the "Screen Setting" screen.

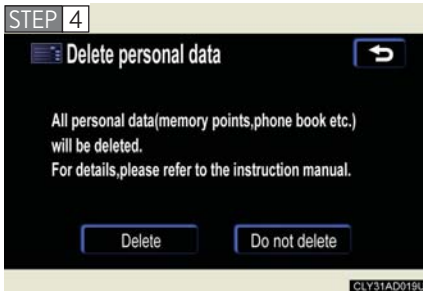

Touch  .

Check carefully beforehand, as data cannot be retrieved once deleted.

## n When deleting personal data

Data can only be deleted when the vehicle is stopped.

## n When selling the vehicle

Be sure to delete both the call history and personal data.

## n If you touch

The display returns to the previous screen.